



Putting It Together

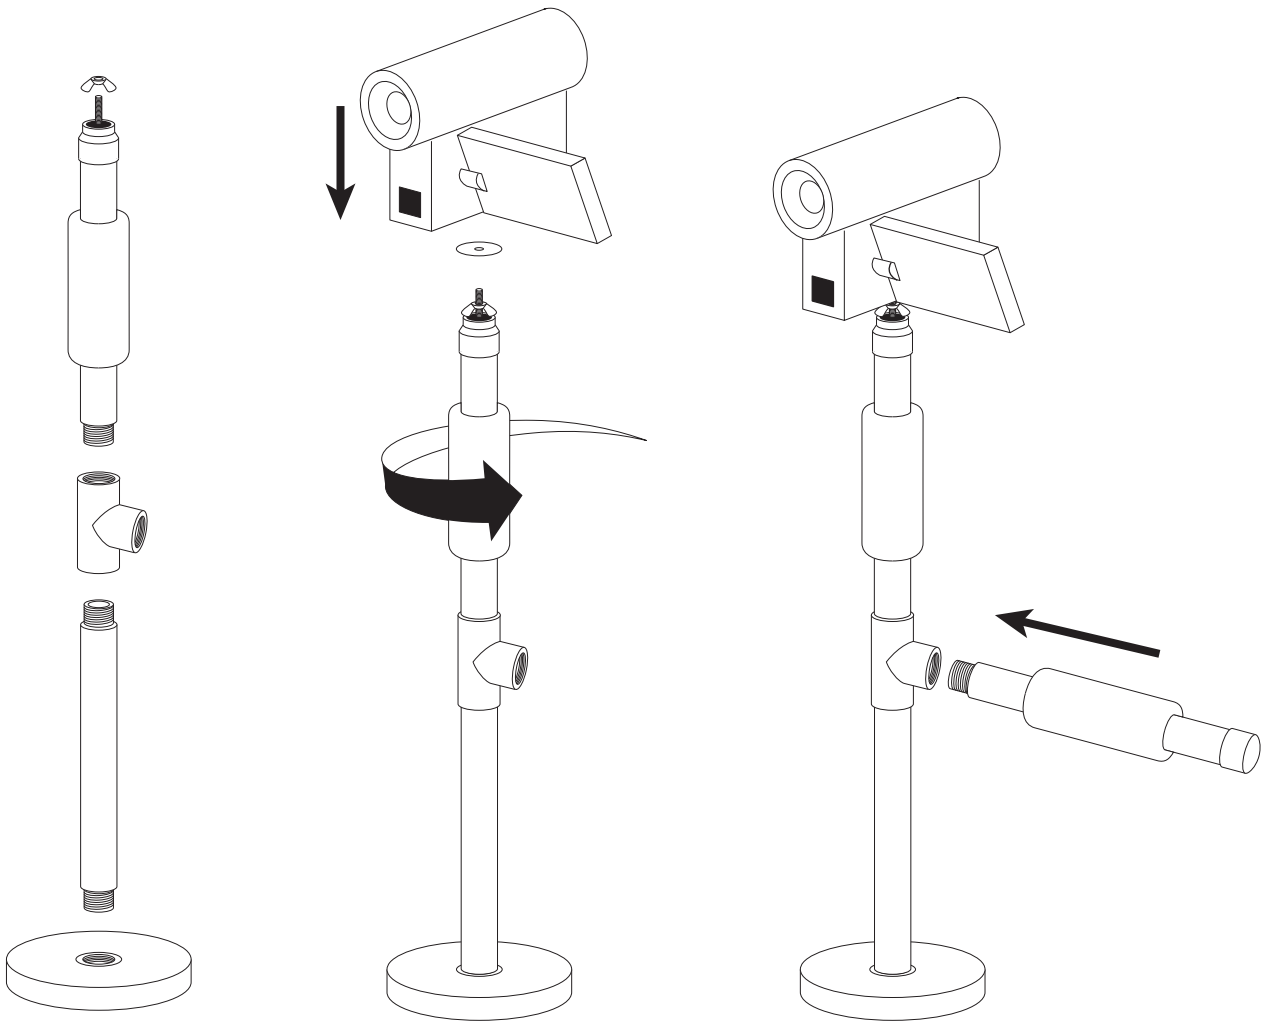


1 Assemble the main column with the wing nut upside down.

2 Attach camera by holding camera and turning main column. Tighten wing nut against camera bottom.

3 Attach side handle. Begin filming

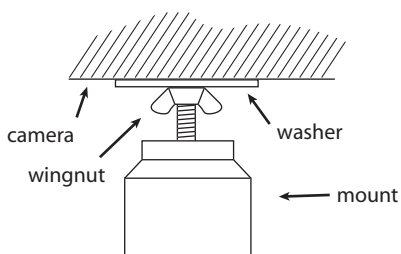

close up of camera mount

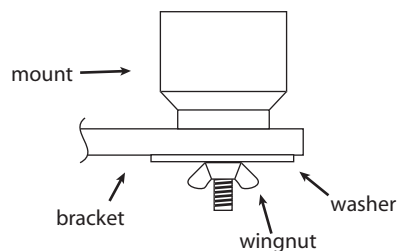

close ups of inverting bracket usage

